

acoustic®

G412AC OWNER'S MANUAL



Congratulations on your purchase of a new Acoustic premium guitar amp cabinet. Founded as the Acoustic Control Corporation in California in 1967, Acoustic is the rig of choice for many legendary touring musicians. If you're new to Acoustic amps, we encourage you to get in tune with its rich heritage at www.acousticamplification.com/history.cfm.

Your comments are important. We constantly improve our products based on feedback from musicians like you. Please feel free to contact us at www.acousticamplification.com or send us an email at info@acousticamplification.com.

Welcome to Acoustic, the Pro's Tone™.



MONO MODE

- In Mono mode, all four speakers are connected together to give you a total impedance of 4 or 16 Ohms.
- Set the switch to the left for 16 Ohm operation or to the right for 4 Ohm operation.
- The left jack functions as a mono input for either a 16 Ohm or 4 Ohm load.

STEREO MODE

- In Stereo mode, the left and right speakers are connected separately, providing an impedance of 8 Ohms per side.
- With the switch to the right, the jacks send their individual signals to their corresponding speakers (left or right).
- Stereo mode is useful when using two Mono amp heads, or one stereo head or power amp.